

Accessory Protocol Interface Module (APIM)




Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.


Using a diagnostic scan tool, begin the PMI process for the APIM following the on-screen instructions.

2. Remove the ACM .
Refer to: Audio Front Control Module (ACM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
3. Remove the bolts and position the APIM down.
Torque: 22 lb.in (2.5 Nm)

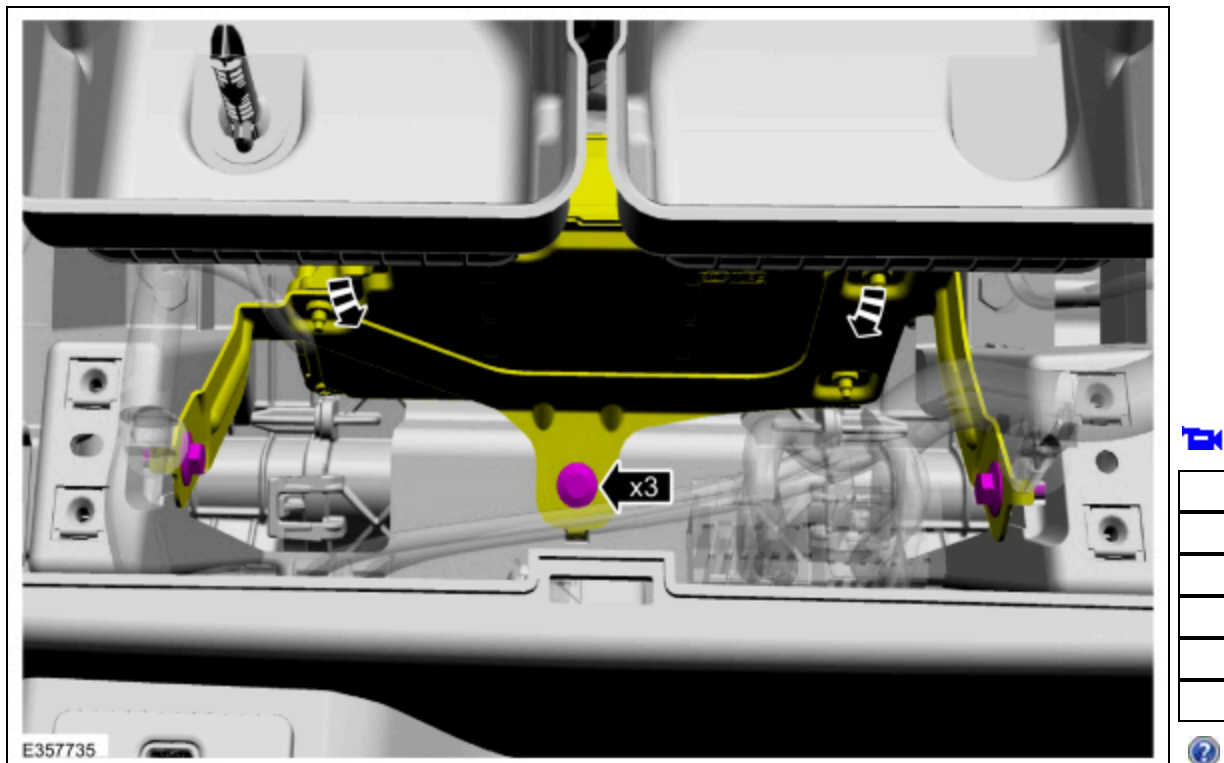


4. **NOTE:** A pick tool can be used to aid in releasing the locking tab on the large RH connector.

Disconnect the electrical connectors and remove the APIM and bracket as an assembly.

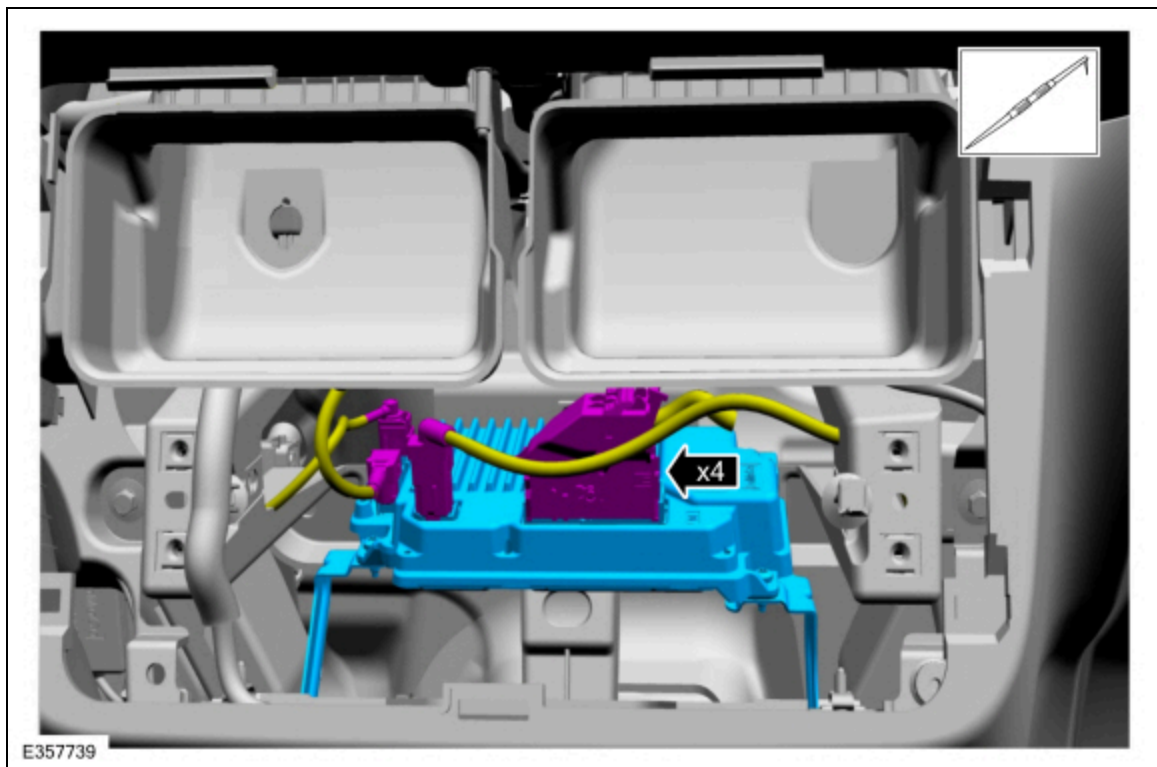

5. Remove the screws and the APIM .

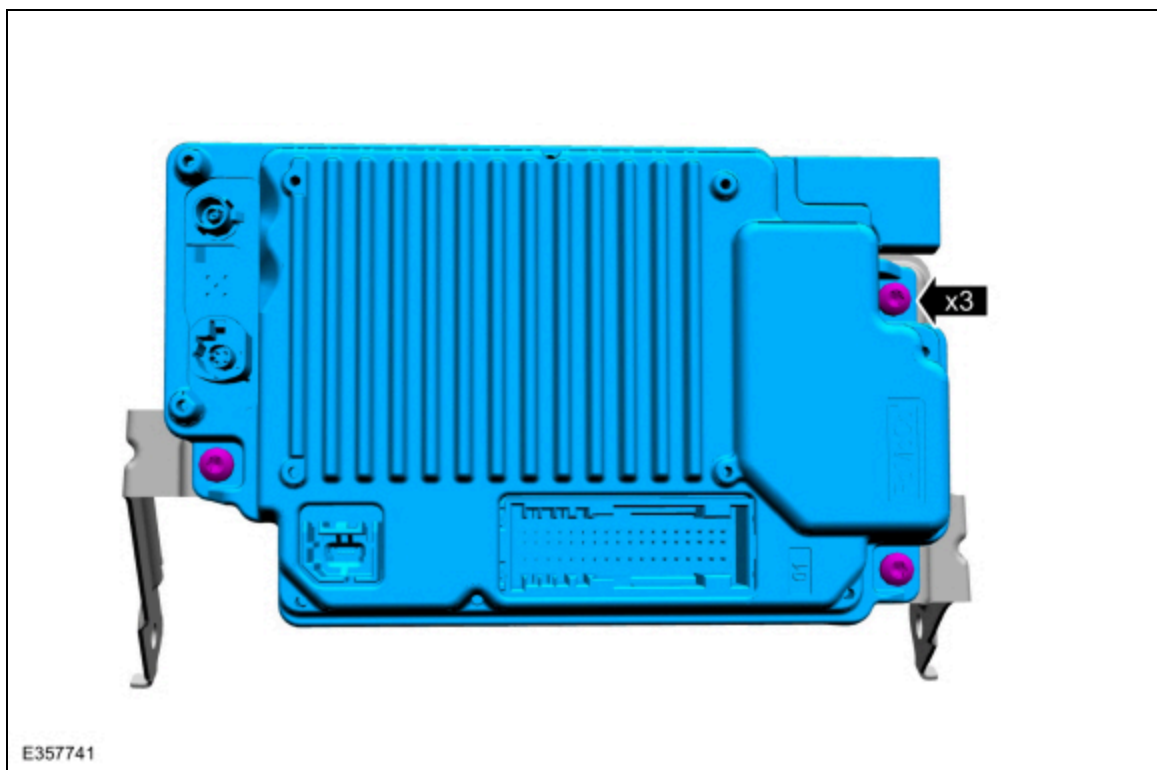

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the APIM following the on-screen instructions.

