

Floor Console




Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: *Removal steps in this procedure may contain installation details.*


1. Remove retainer and the LH floor console side trim panel.
Use the General Equipment: Interior Trim Remover

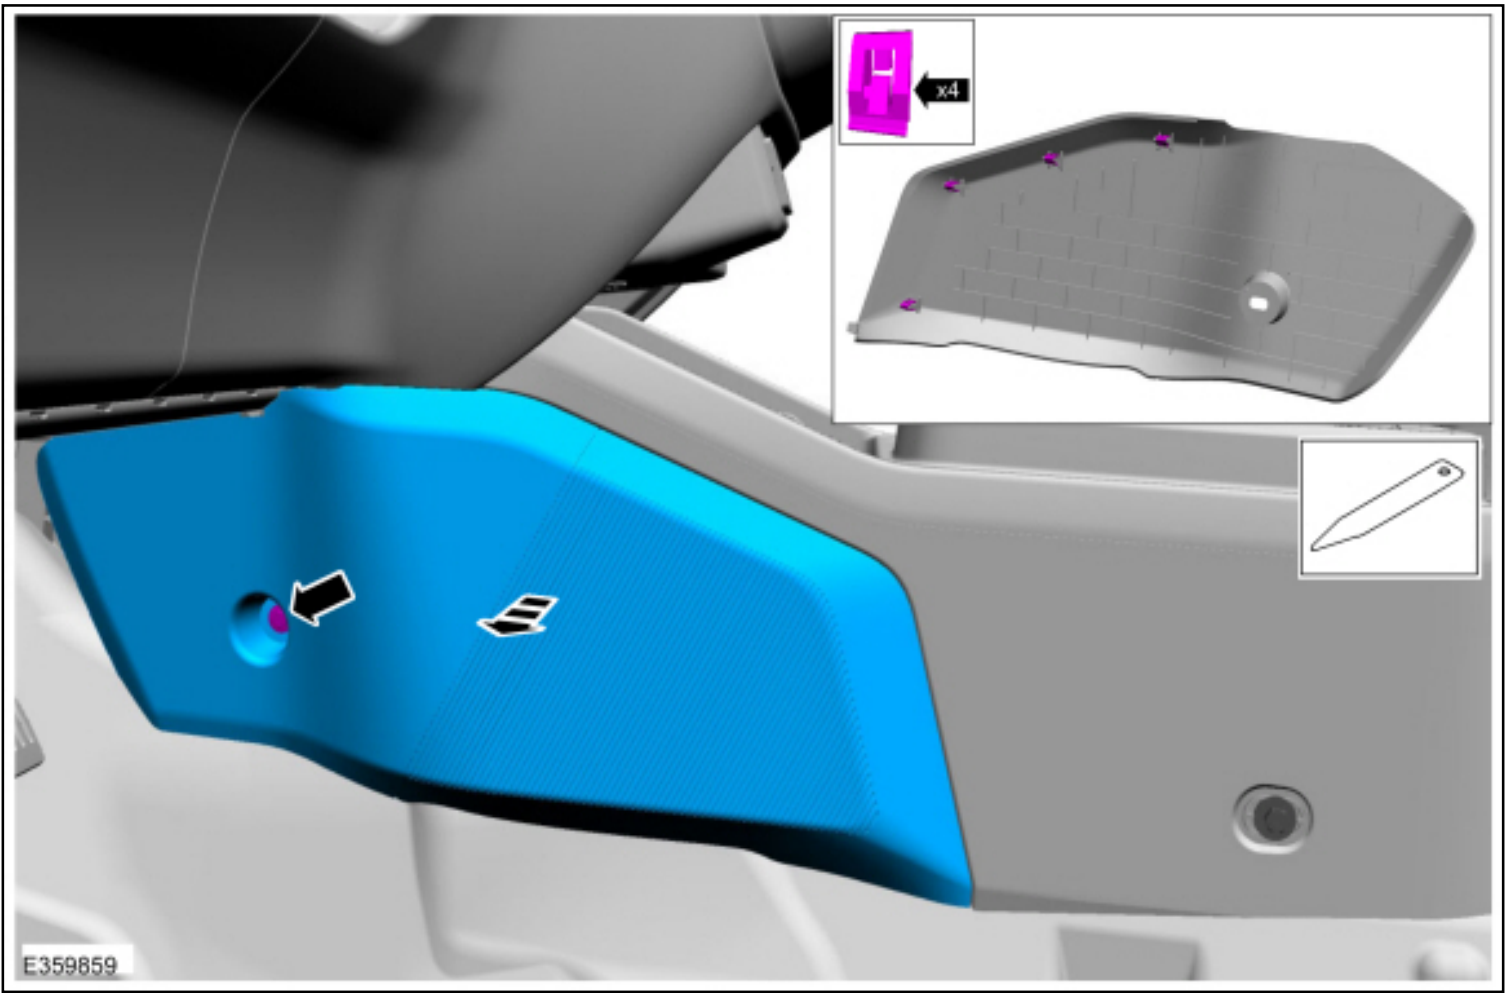


2. Remove the RH floor console side trim panel.
Use the General Equipment: Interior Trim Remover

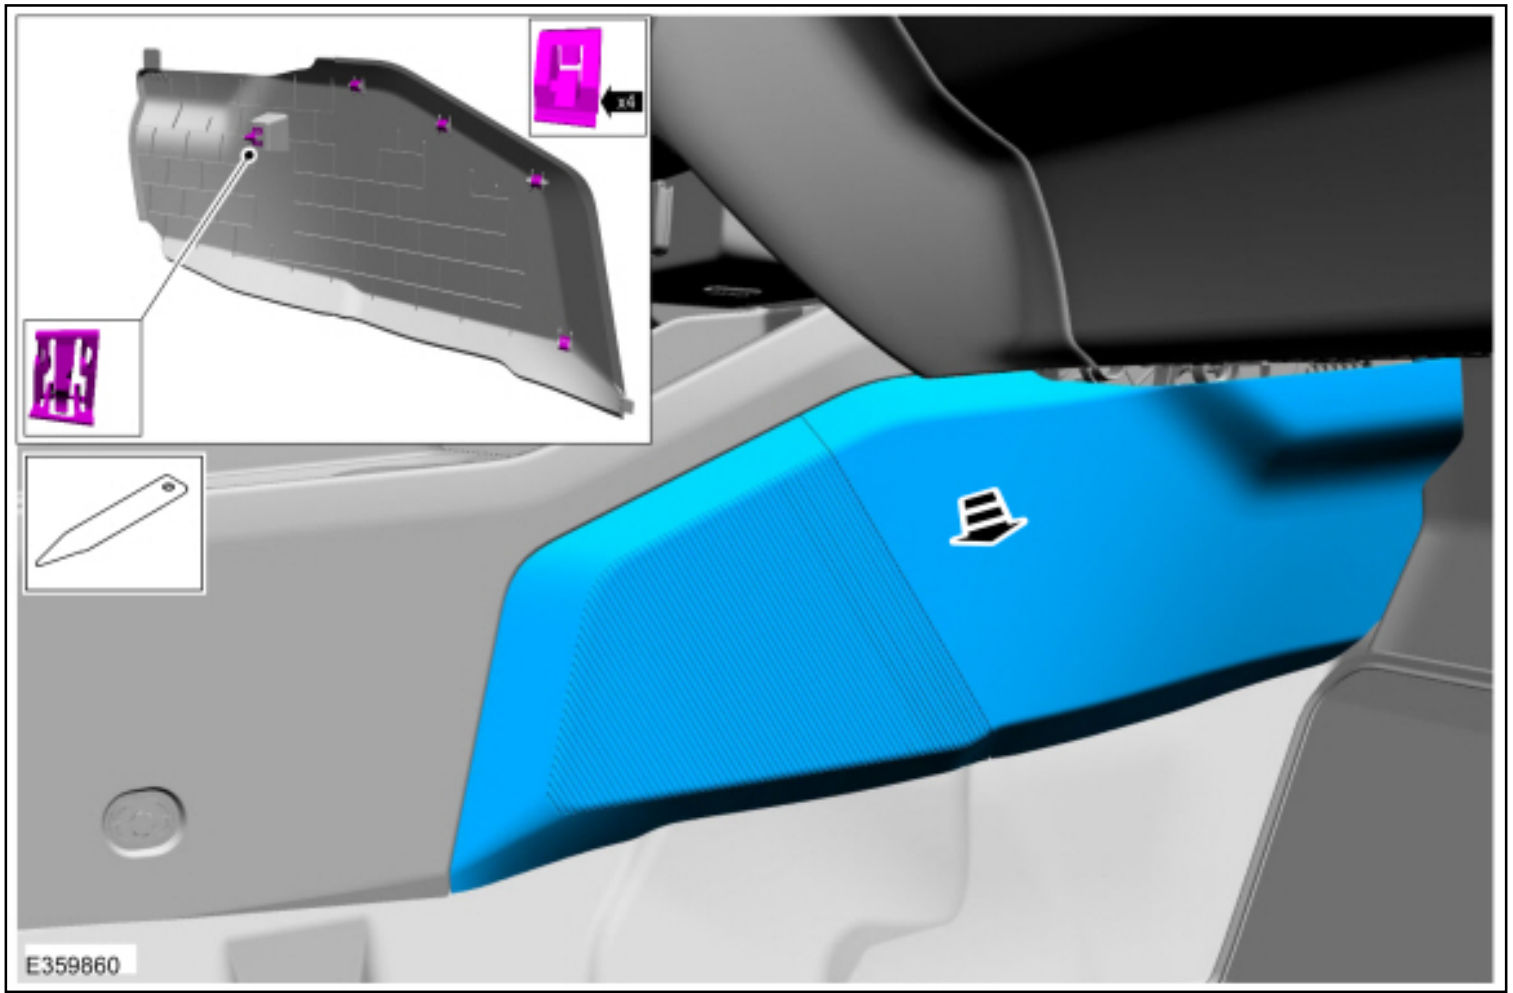

3. Disconnect the electrical connector.

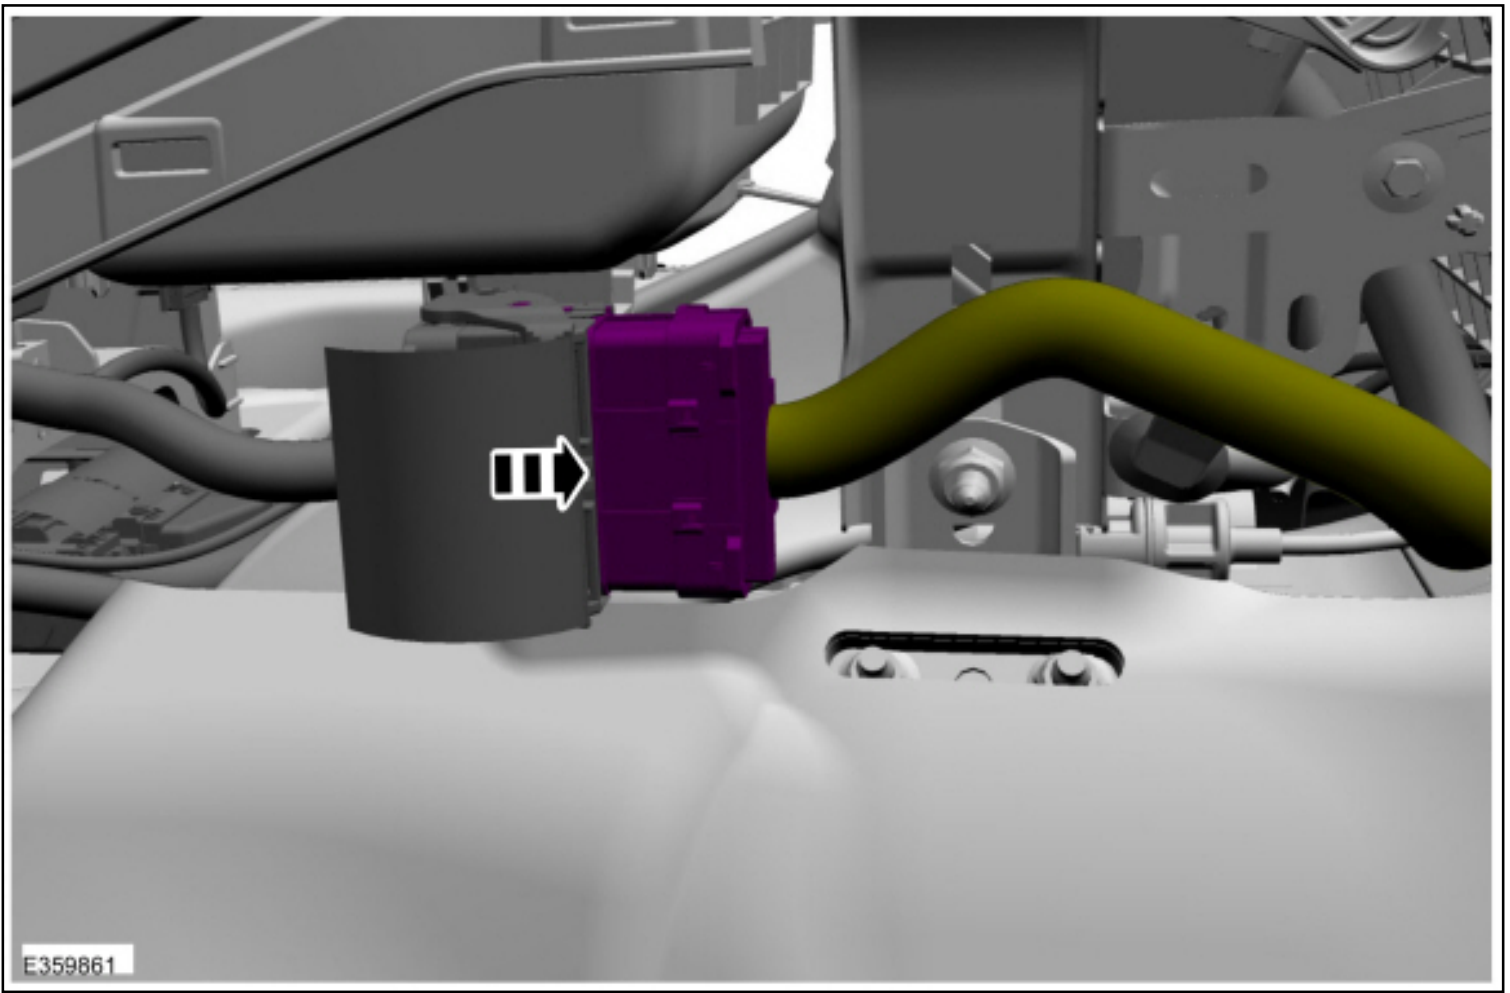

4. Remove the retainers and the floor console.
Torque : 25 lb.in (2.8 Nm)

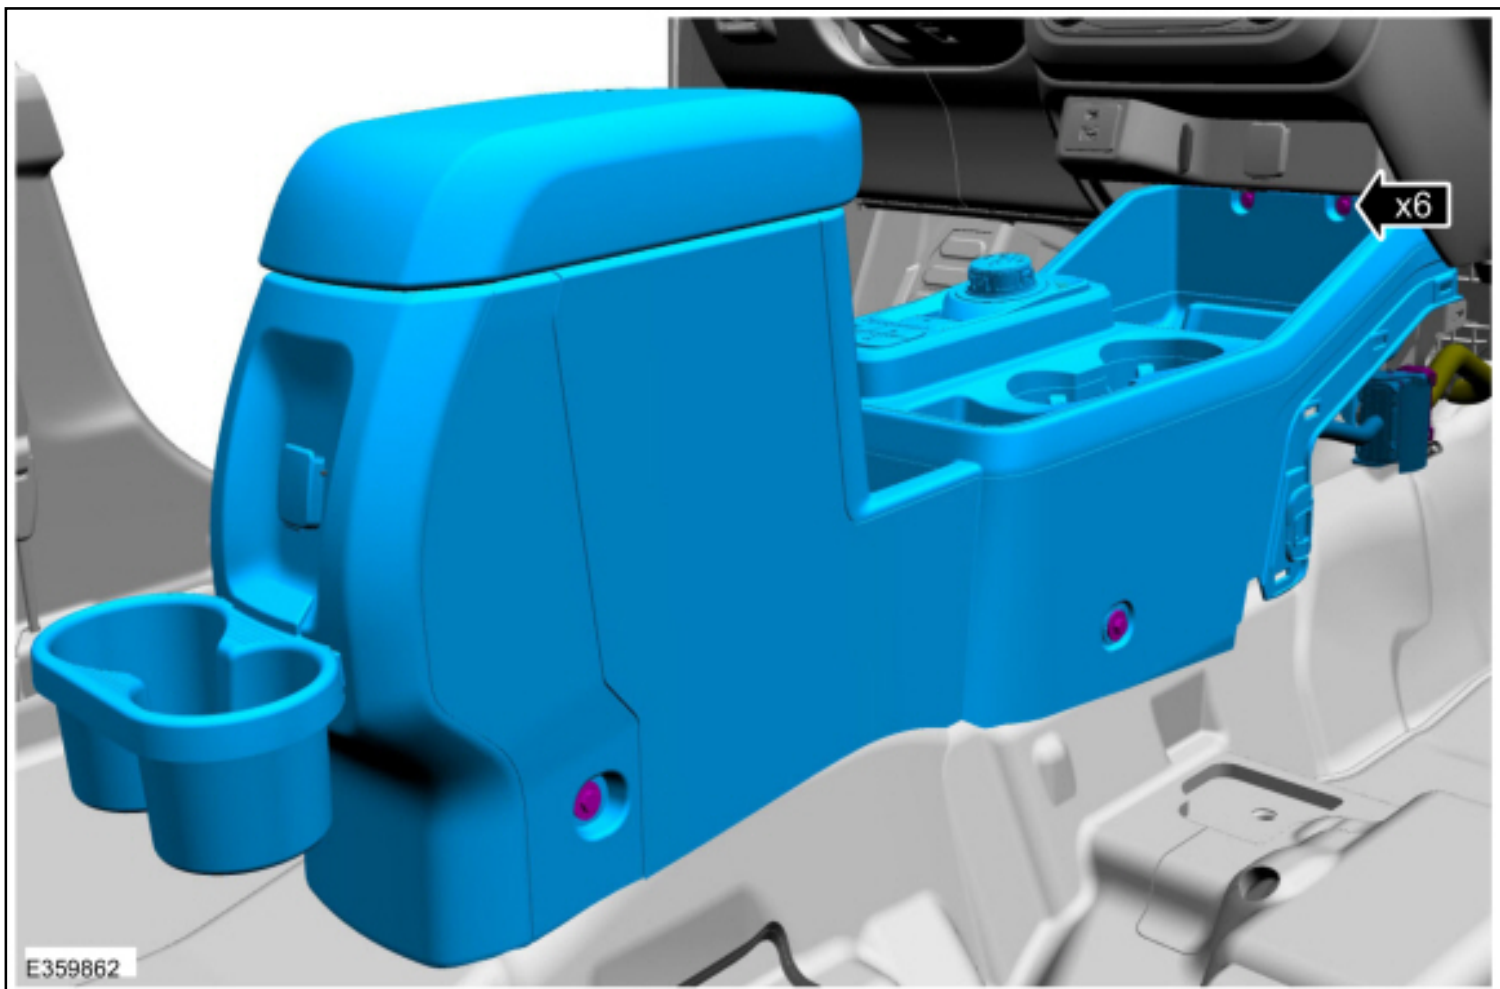

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *Anytime the parking brake switch electrical connector has been disconnected, the EPB system is deactivated and a DTC is stored in the ABS module. Perform the following EPB step to restore the system and clear the ABS module EPB .*

Apply and release the parking brake twice within 5 seconds, pausing with the switch in the NEUTRAL position for approximately one-half second between each apply and release.