

Rear shock:



Remove the plastic cover and unbolt the top mount from the shock, the bumpstop will be inside of the plastic dust cover:



The front bumpstop will be on the shaft under the dust boot, remove the plastic ring and first two ribs:

