

15. Check the Wiring Diagrams manual for any circuits that run from the battery without passing through the main fuse box or other fuse box(es). If the current draw is still excessive, disconnect these circuits until the draw is found. Disconnect the generator(s) electrical connections and retest if the draw cannot be located. The generator(s) may be internally shorted, causing the current drain.

 16. If equipped with window one-touch up, perform the window motor initialization after the negative battery cable terminal is connected to the negative battery post.
Refer to: [Power Door Window Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures) .
-