


Roof Mounted Antenna



Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Lower the headliner.
Refer to: [Headliner - Lowering](#) (501-05 Interior Trim and Ornamentation, Removal and Installation) .
2. Disconnect the antenna connectors.

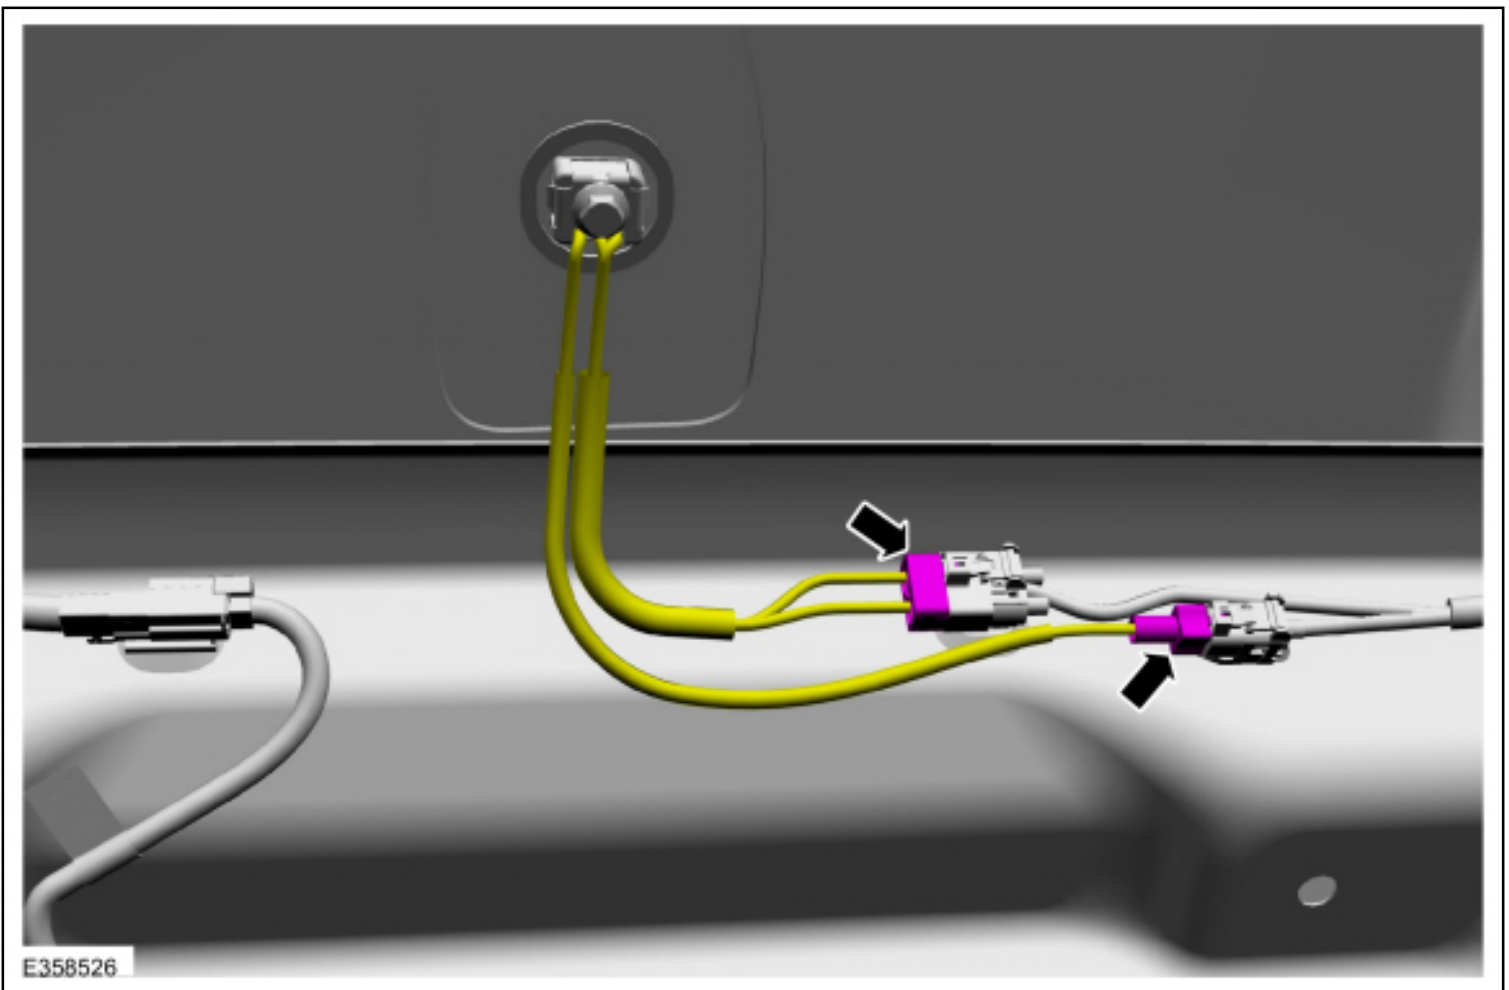

3.

Remove the roof antenna.

1. Remove the bolt.
Torque : 55 lb.in (6.2 Nm)
2. Remove the spring retainer.
3. Release the tabs.
4. Remove the roof antenna.

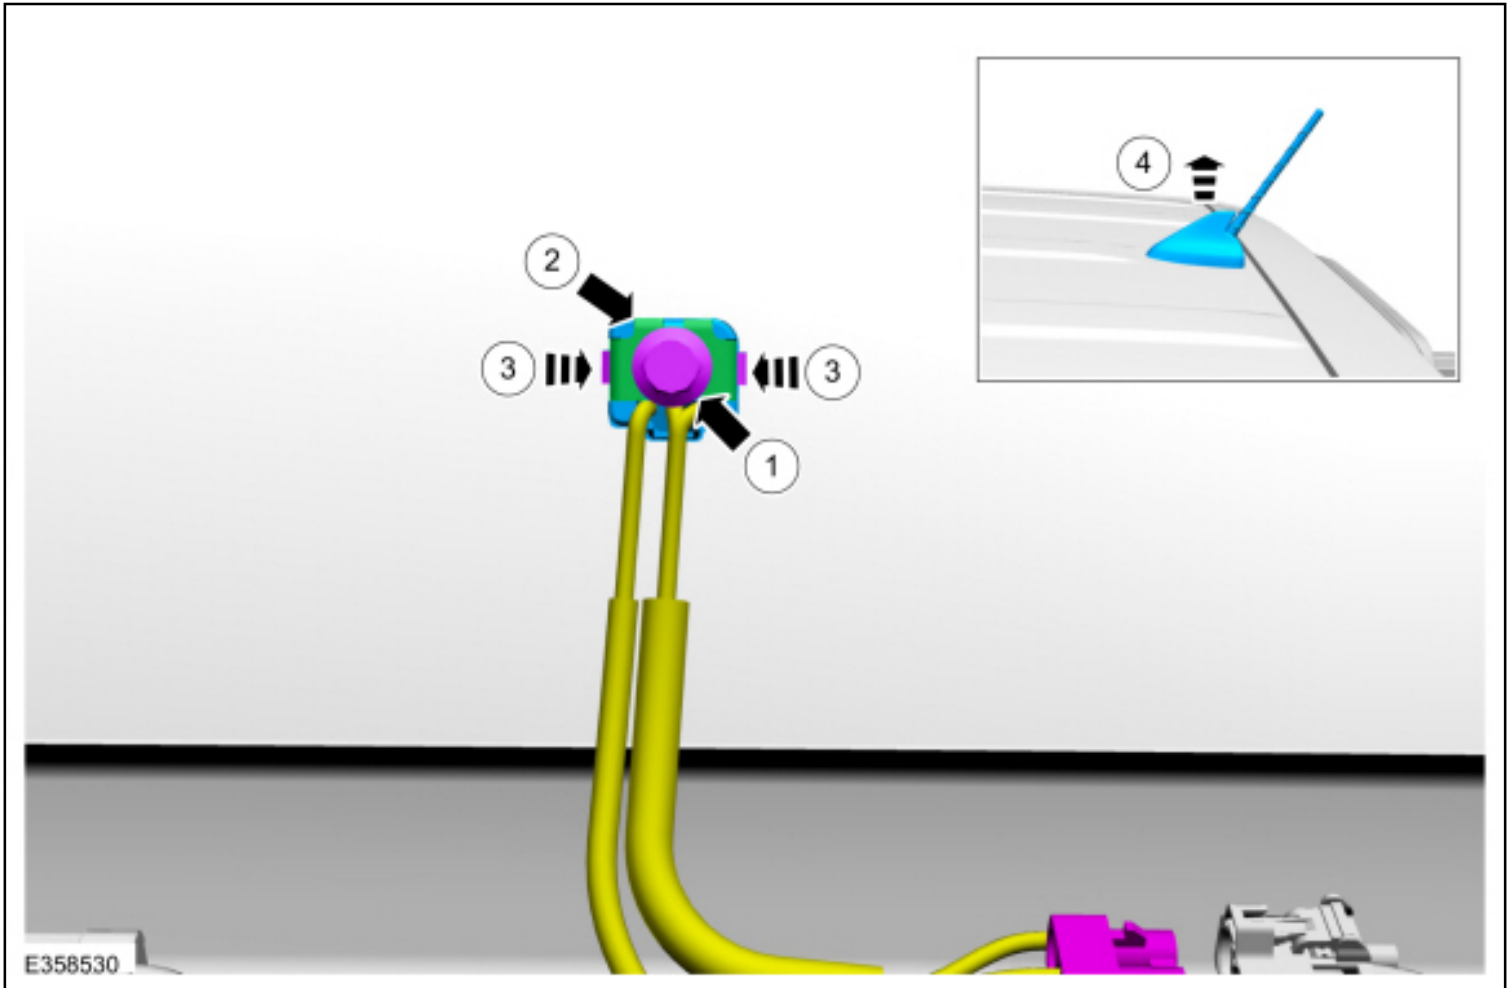

Installation


Existing antenna

1. To install, reverse the removal procedure.


New antenna

2. **NOTE:** *If installing a new roof mounted antenna it is not necessary to remove the bolt from the satellite radio antenna base.*

Install the roof mounted antenna harness through the roof opening and push the base down until fully seated.

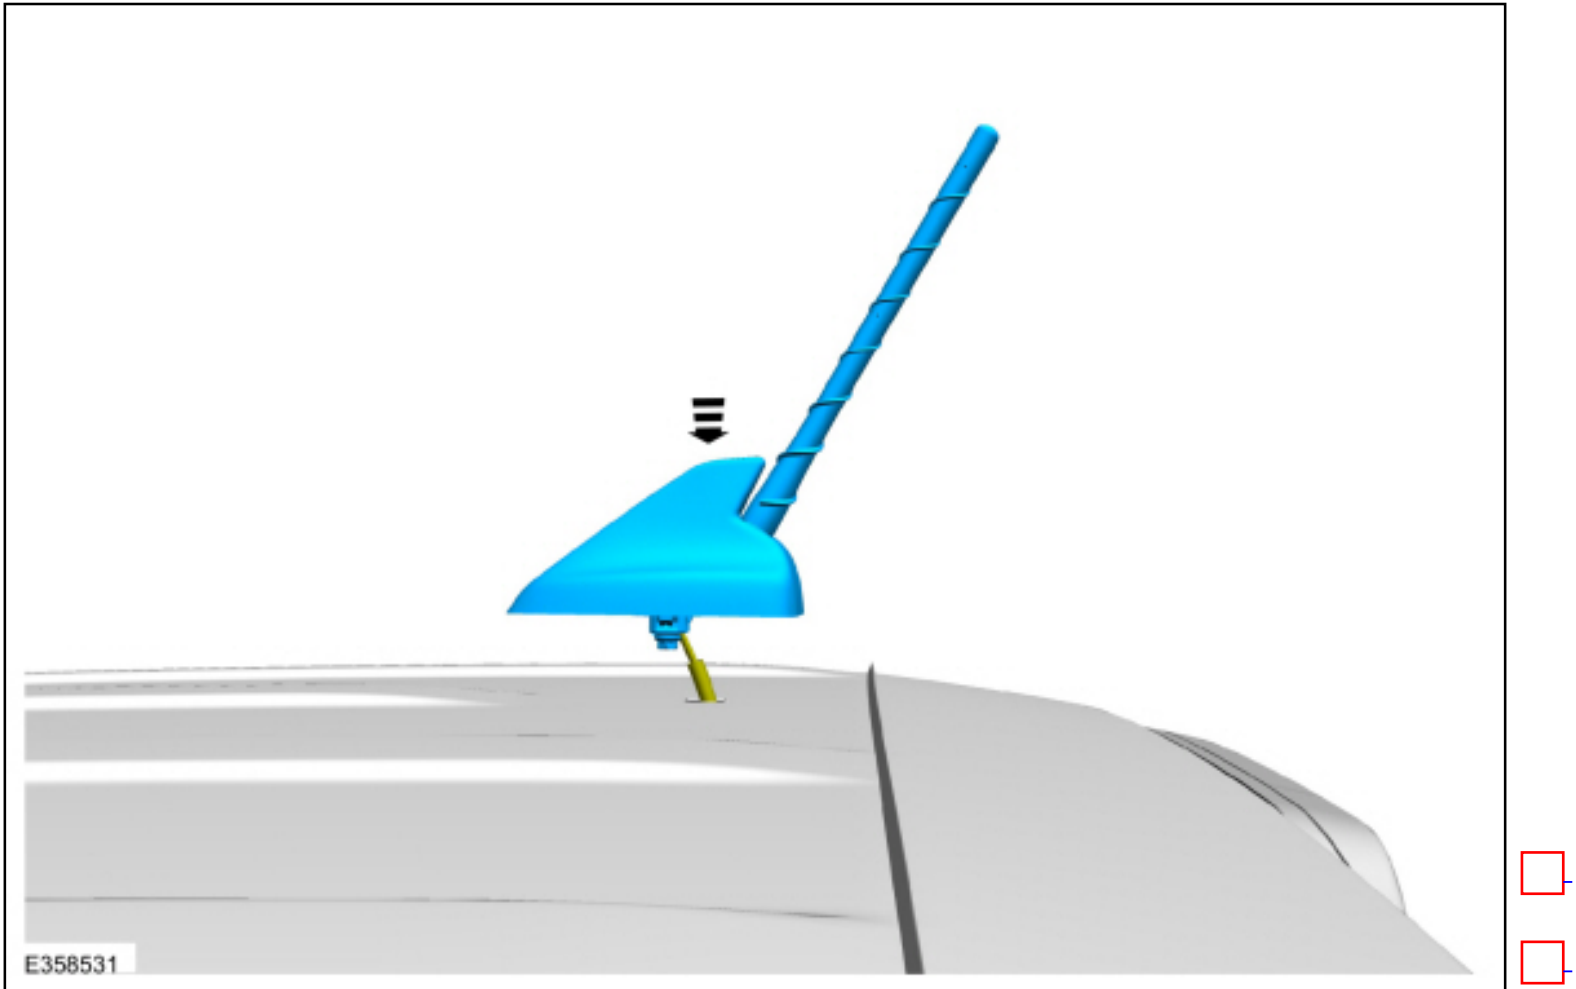

3. Connect the antenna connectors.

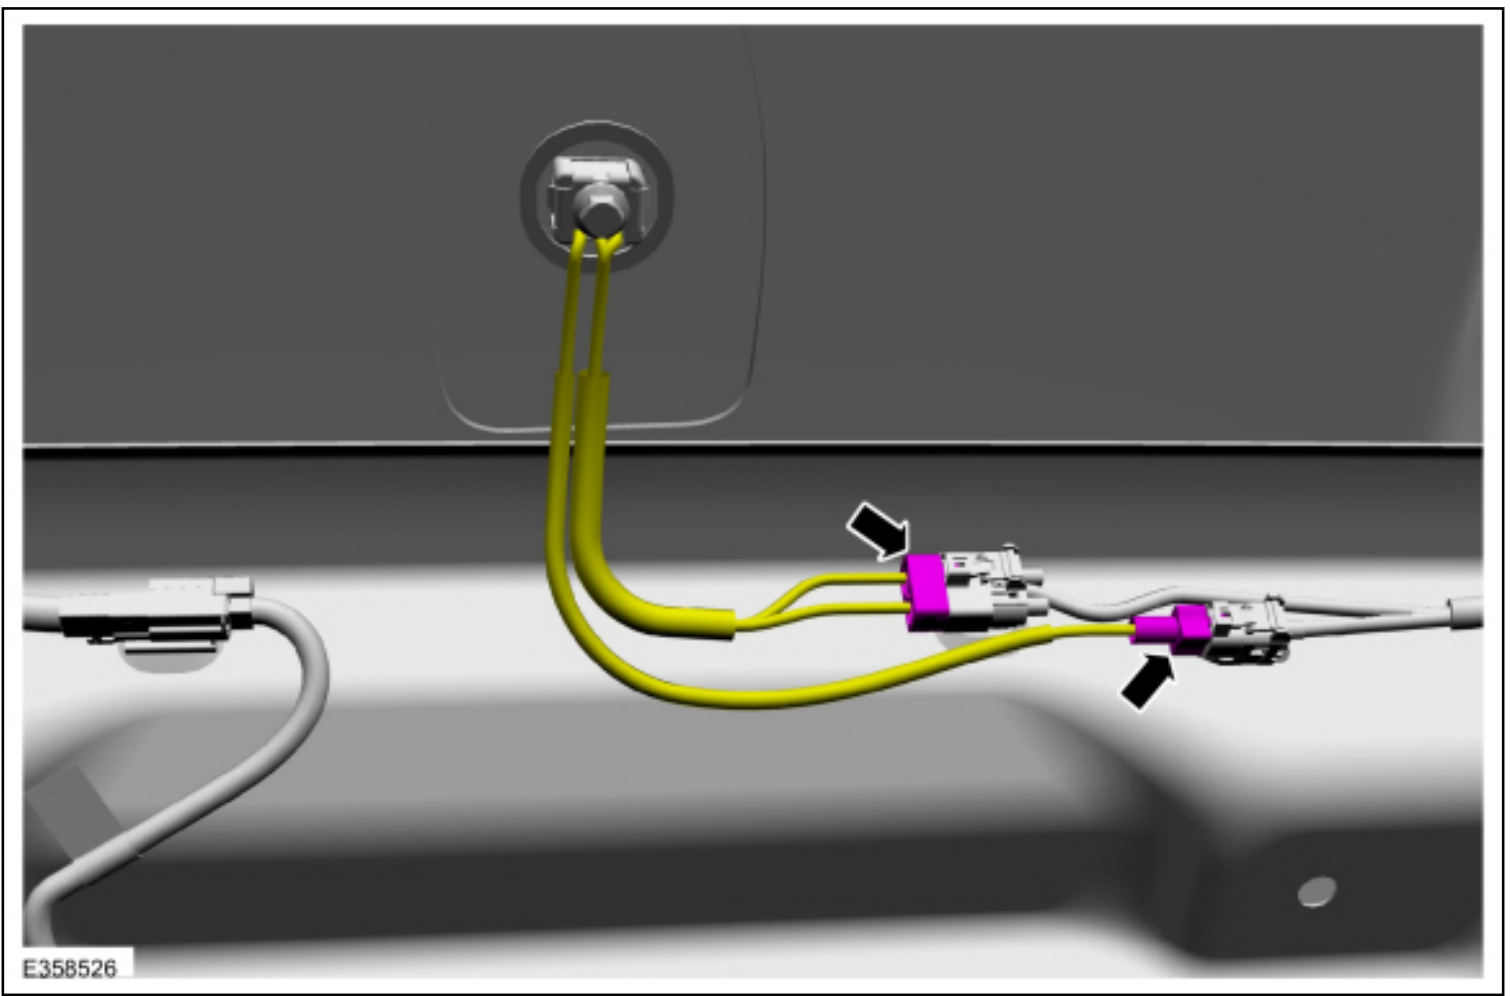

4. Install the headliner.

Refer to: [Headliner - Lowering](#) (501-05 Interior Trim and Ornamentation, Removal and Installation) .

© Copyright 2022, Ford Motor Company.
